

SOMERSET

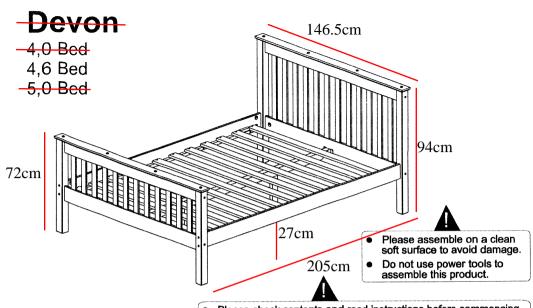

- Please check contents and read instructions before commencing assembly.
- Assemble this article following the enclosed instructions carefully.
 Please take care to avoid damaging panels during assembly.

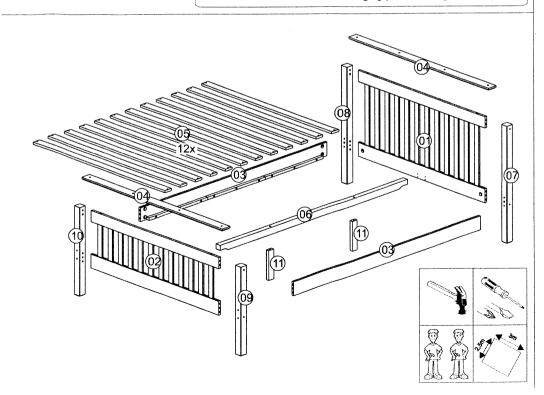

Α	1/4x100mm	12	G		80
В	1/4	12	Н	3,5x16mm	12
С	10x40mm	20			02
D	%) 3.000 4,0x35mm	32			UZ
E	4mm Hex wrench	01	J	(a) 7x90mm	06
F	Spacer block	02			enabena anna enconomination (territoria)

