







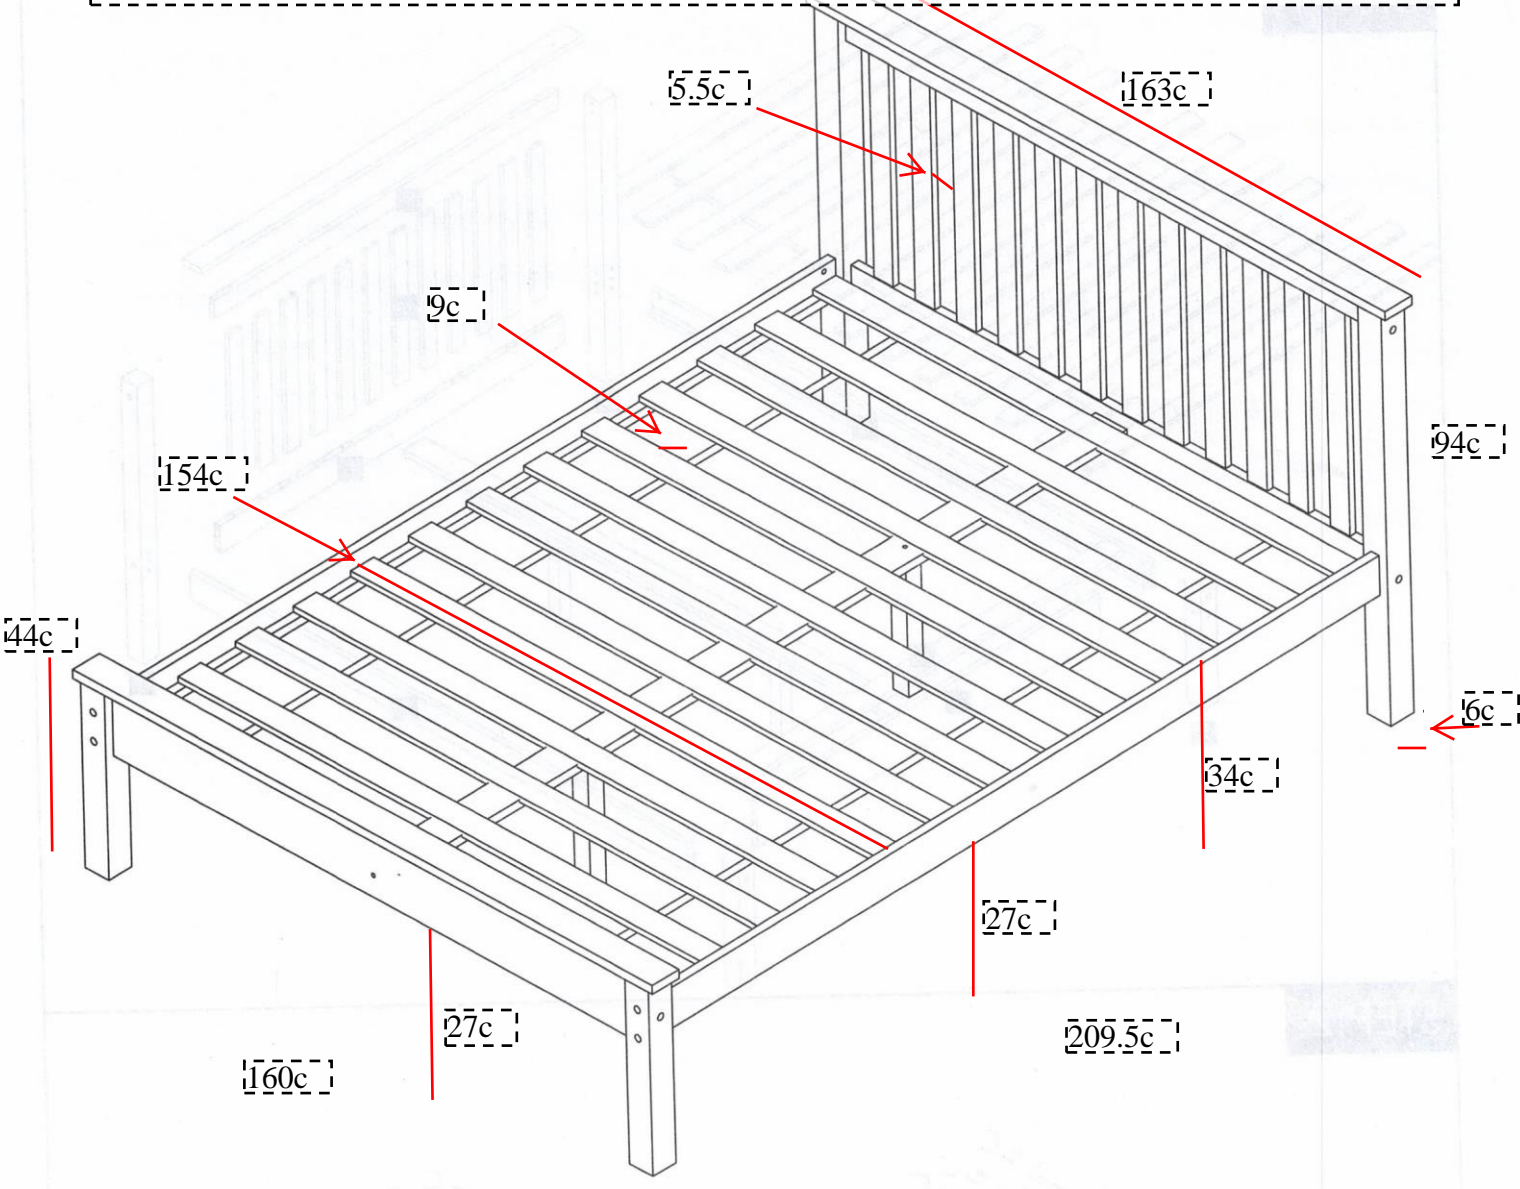


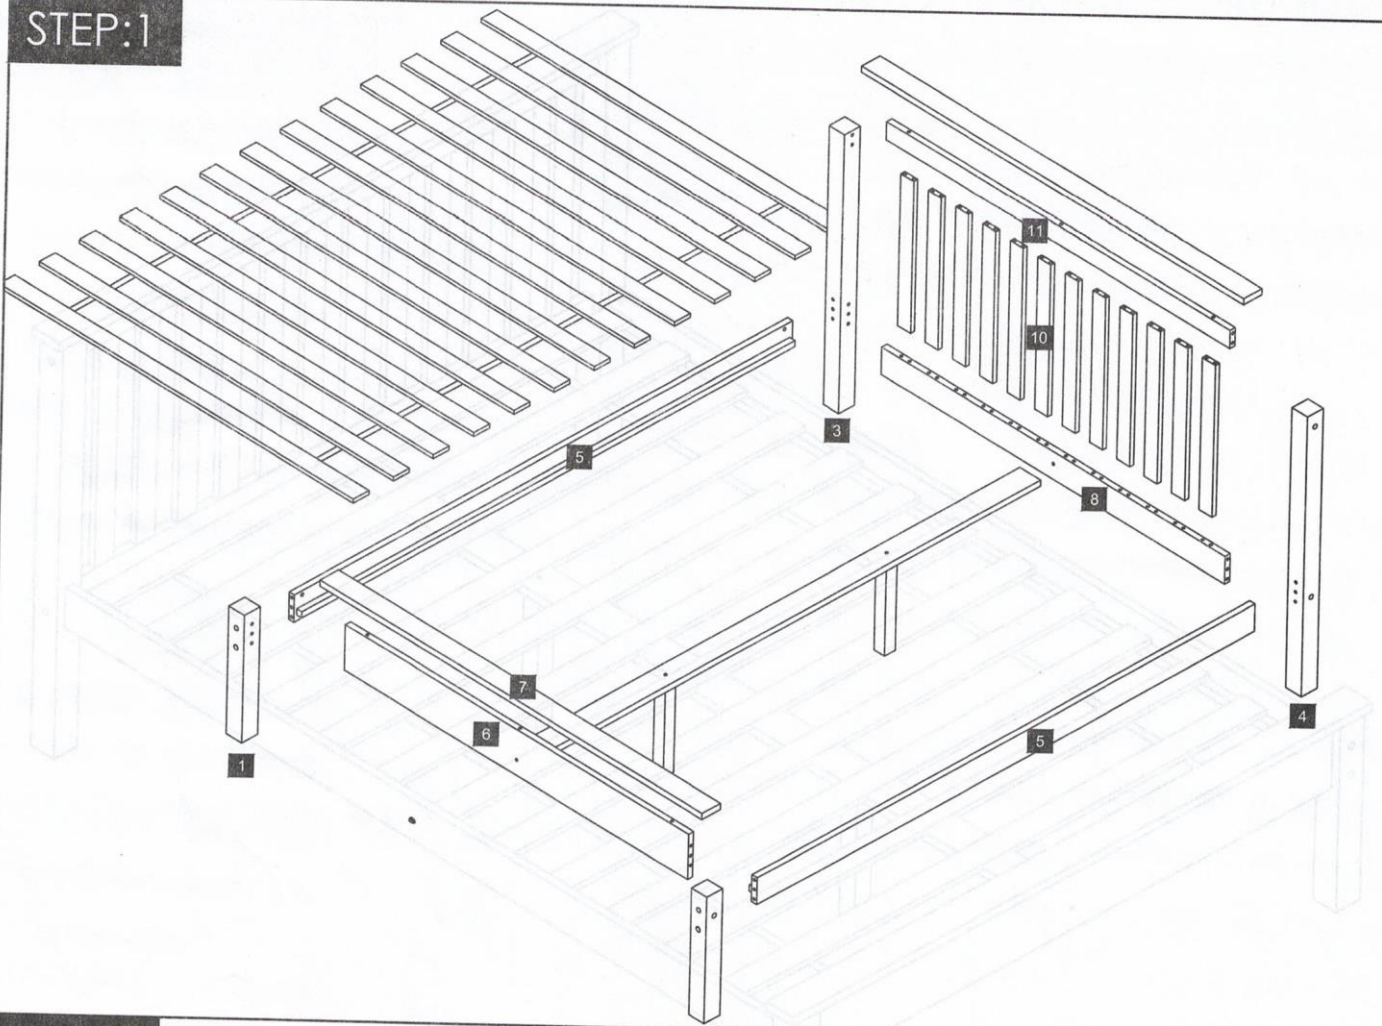


4FT6 & 5FT WILTSHIRE BED ASSEMBLY INSTRUCTIONS






A		M6*90	14
B			14
C		Φ8*30	62
D		1510	6
E			6
F		Φ7*50	4
G		4*30	26
H		Φ15	14
J		Φ12	2
K		4 mm	1

STEP:1




STEP:2

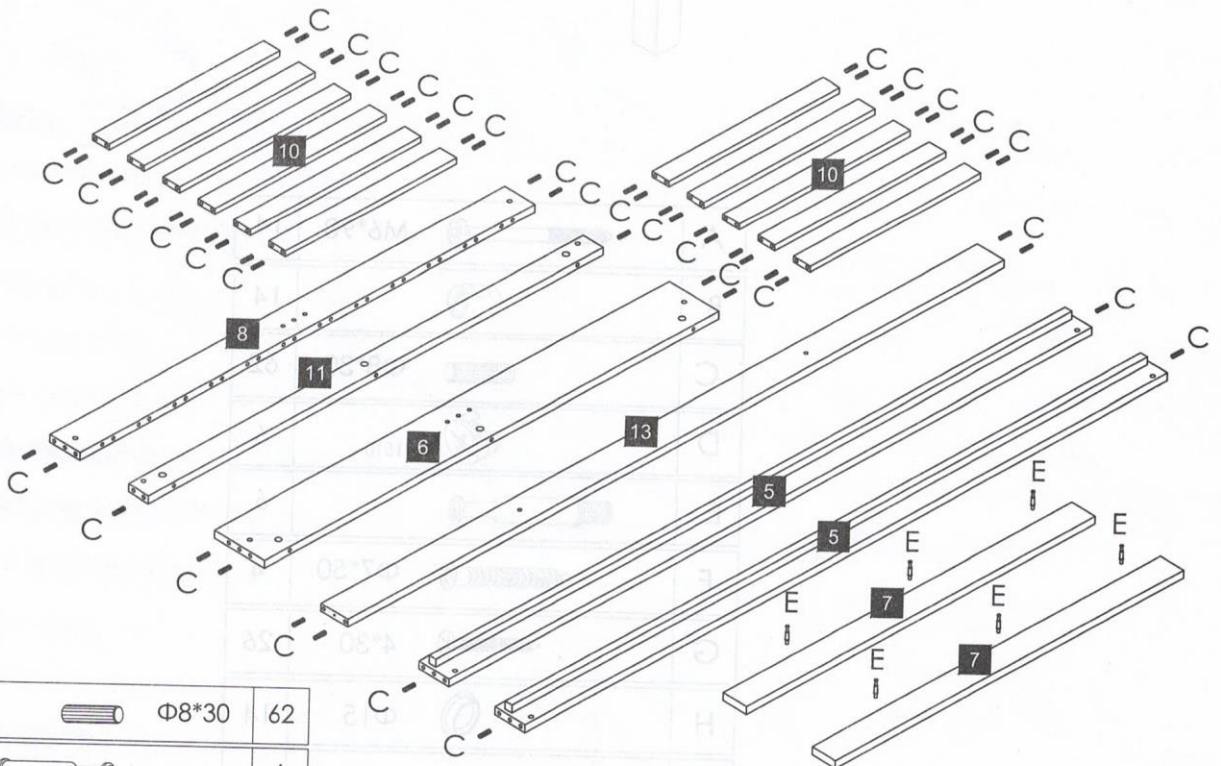


C		Φ8*30	62
E			6


STEP:3

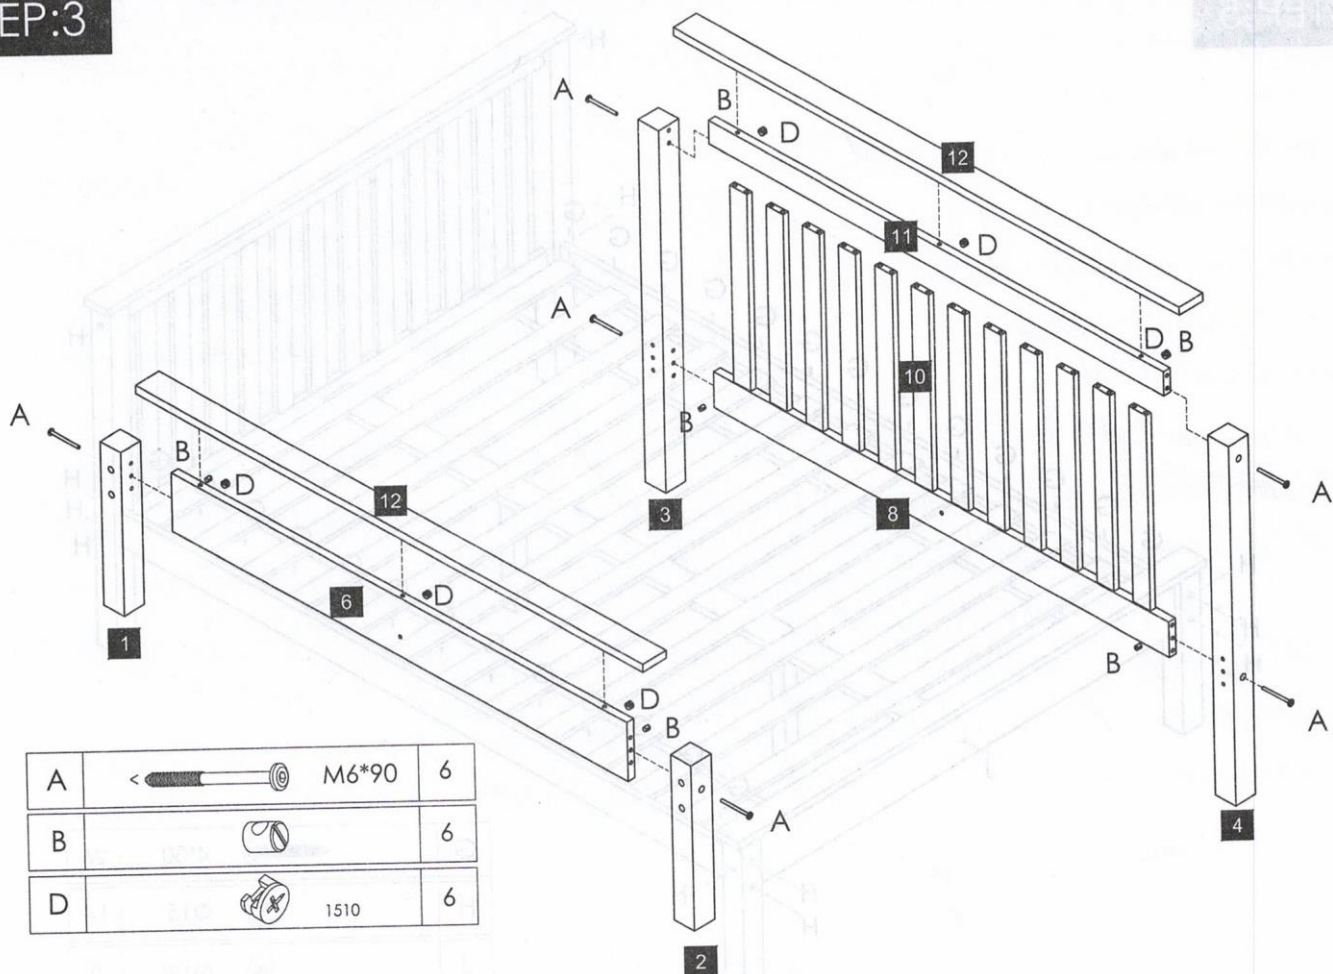

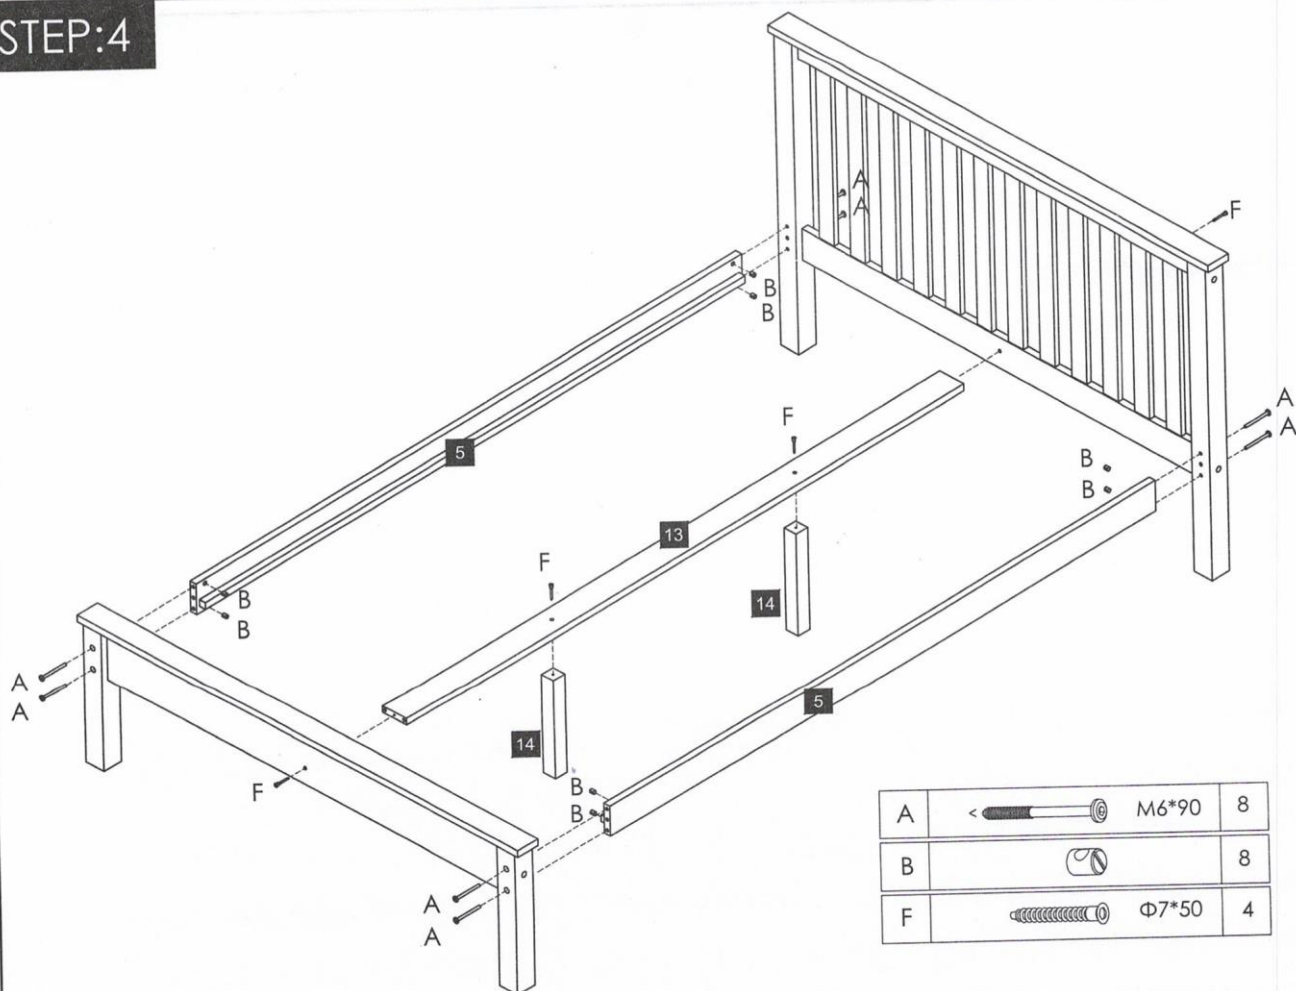



STEP:4

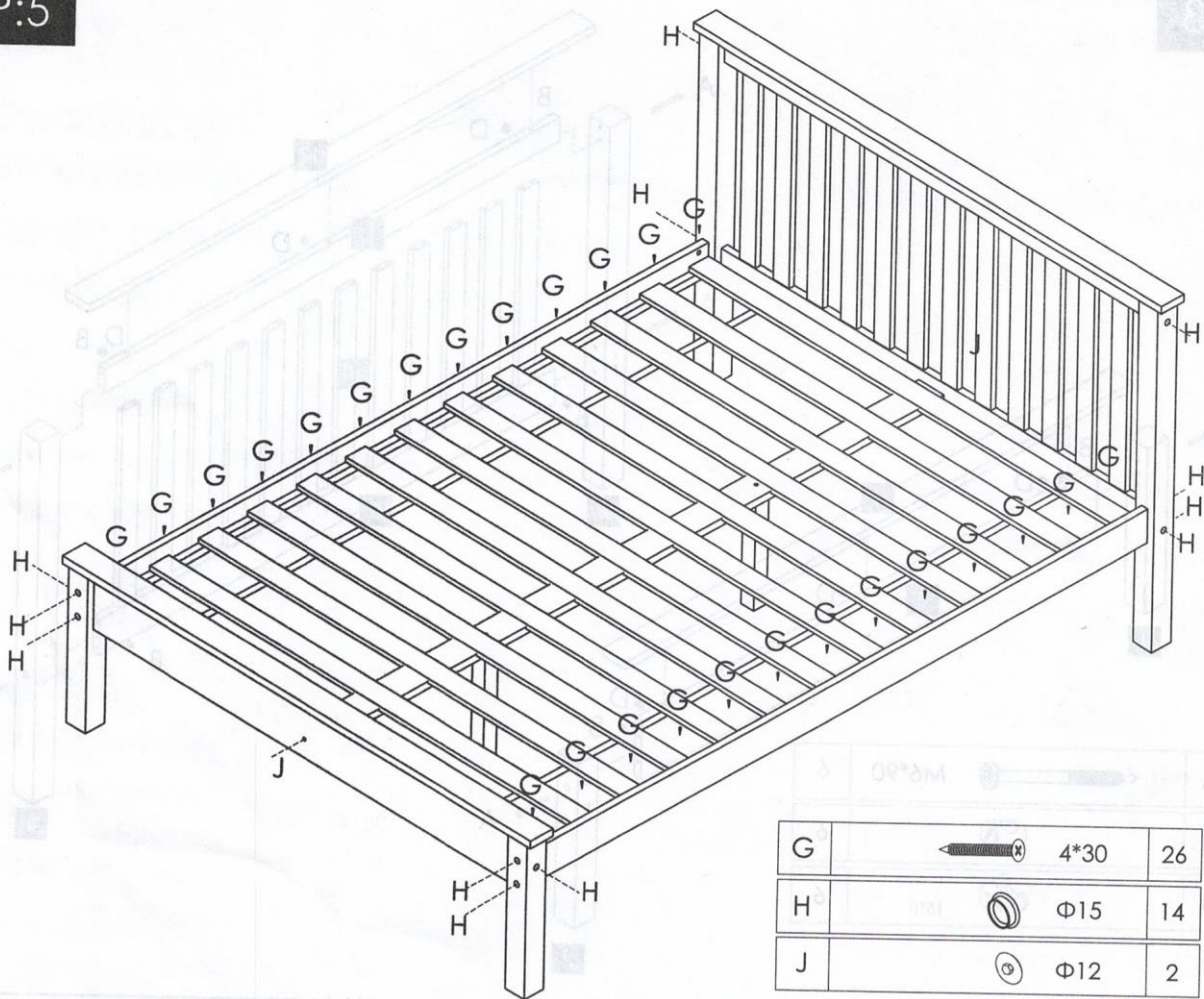

STEP:5



G		4*30	26
H		Φ15	14
J		Φ12	2

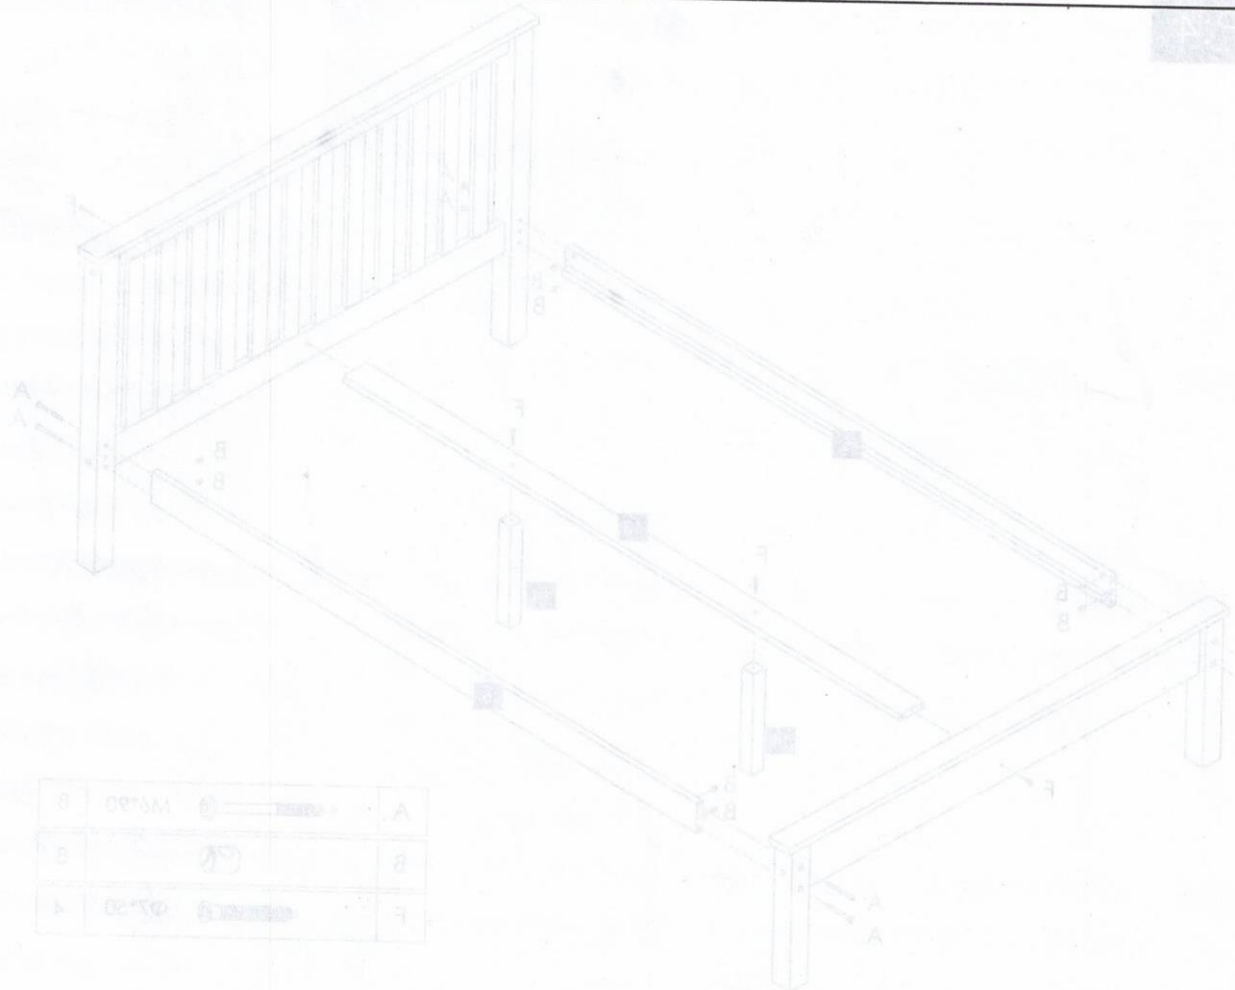

G		4*30	26
H		Φ15	14
J		Φ12	2